How To add the redundant hot-swap fan kit

46.G54FK.002

1

Power off the server and open the chassis. Disconnect rear fan connector (1 and 2 in the picture below)

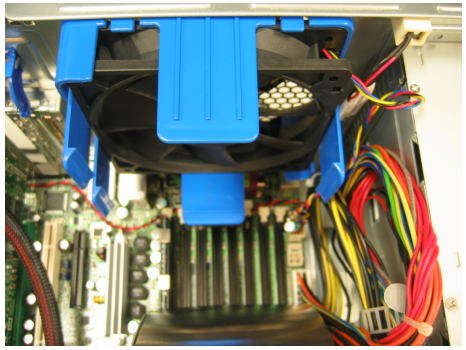

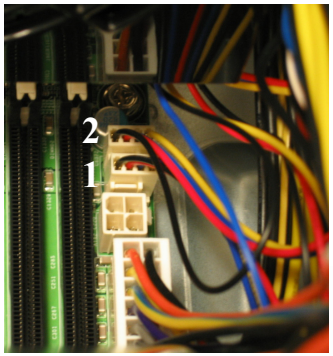

2

Remove the four screws that are keeping the fan from the rear part of the chassis.

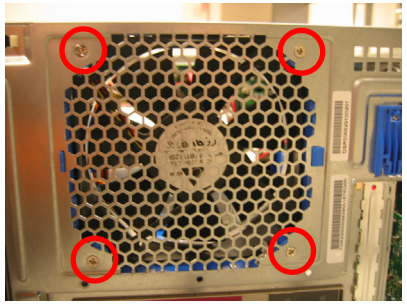

3

Remove the fans and also the blue fans holder from the chassis.

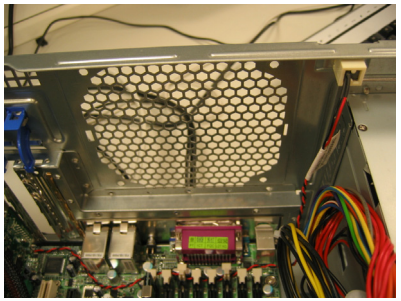

4

Place the redundant hot-swap fan inside the chassis and connect both cables to the motherboard, keeping attention on the cables order.

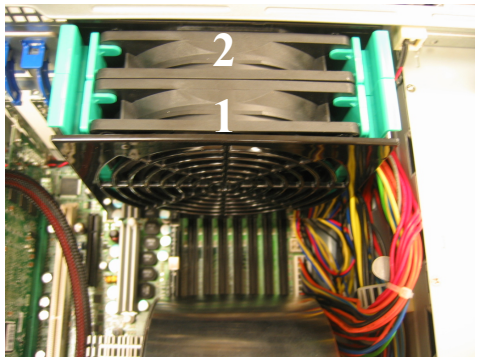

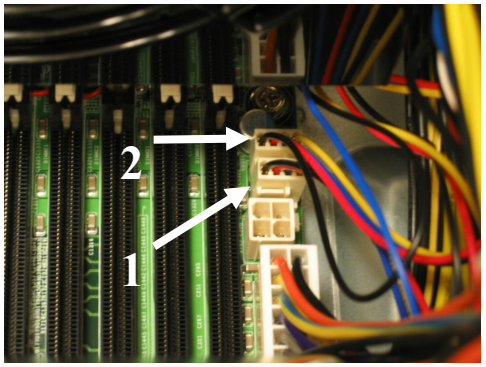

5

Fix the redundant fan holder to the chassis with the four screws.

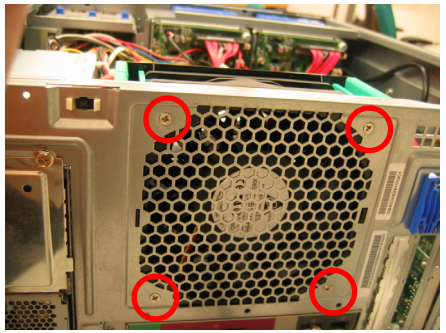

All the How To guides can be found on http://support.acer-euro.com/documents/howto/
SO.G54FK.002 - G540 redundant, Hot Swap Fan Kit. Includes fan holder supporting Hot Swap and two redundant fans. Needs BMC Module SO.BMCG5.002 to achieve complete manageability.